

JZ183 VESA Mount

User Manual



SAFETY INSTRUCTIONS



WARNING: Before beginning, turn off the media player, disconnect the AC adapter from the electrical outlet and the media player, and remove any other external cables from the media player.



Note: The VESA Mount is compatible with the following players: Giada D67 / D68 / D610 / D611 / DM5 / DM6 / DM8 / F103D / F105D / F106D / F110D / i39B.

VESA MOUNTING MATERIALS



Hanging Bracket




Anti-theft Lock



M4*L10MM Screws


Parts	Quantity
Hanging Bracket	1
Anti-theft Lock	1
M4*L10MM Screws	5

DIMENSIONS

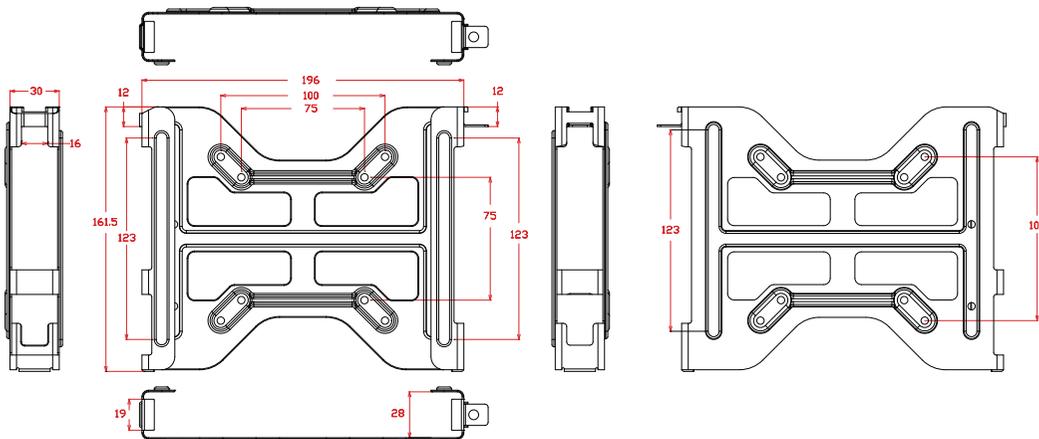


INSTALLATION

1. Assemble the Hanging Bracket (in the direction shown in the following figure) to the rear of a compatible display with four M4*L10MM Screws.

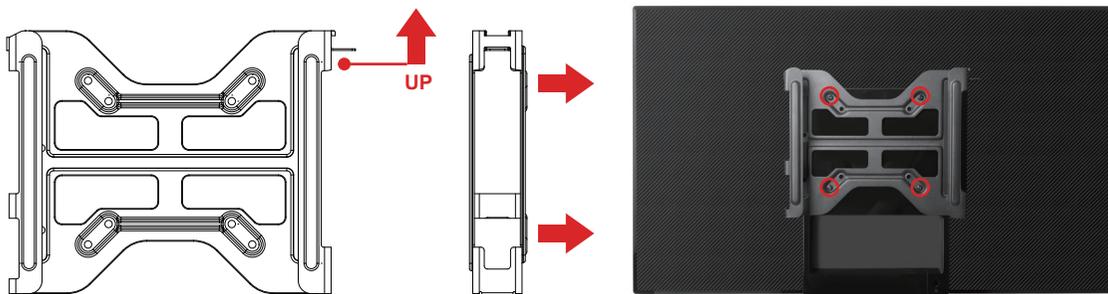

2. Slide and insert the media player.

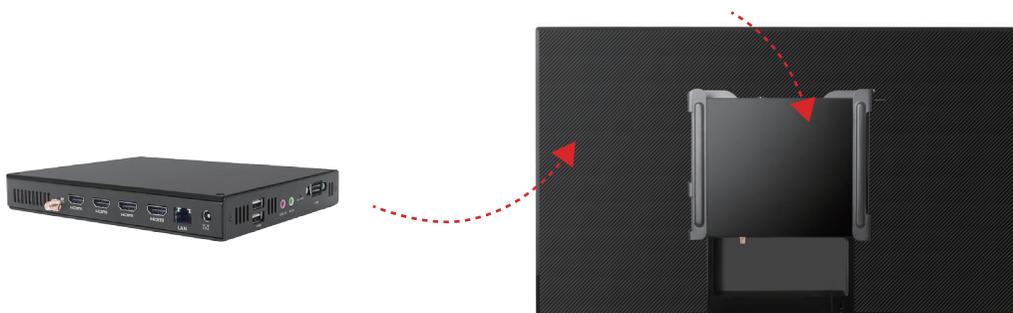

3. Stuck to assemble the Anti-theft Lock.



4. Lock the media player with your own lock if needed. The installation is completed.

